




● Load installation hole position $6 \times M3 \nabla 8$ equispaced

● Fix the joint socket position $6 \times M3 \nabla 8$ equispaced

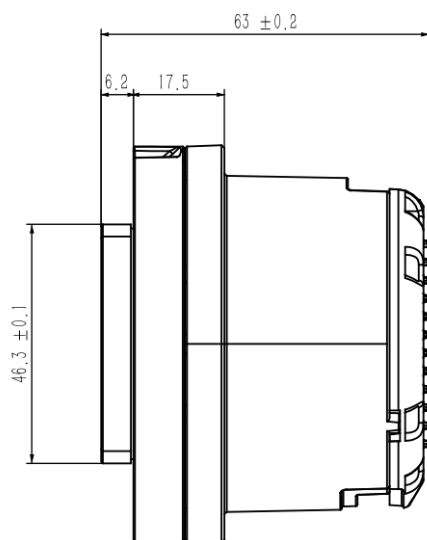